

Owner's Manual Dri-Eaz Extraction Tool

Model F511

DRI-EAZ PRODUCTS, INC.

15180 Josh Wilson Road, Burlington, WA 98233

Phone: 800-932-3030 Fax: 360-757-7950 www.Dri-Eaz.com

Patents: <http://www.LBpatents.com>

READ AND SAVE THESE INSTRUCTIONS

⚠ WARNING

WARNING! Do not alter or modify your Extraction Tool in any way. Use only replacement parts authorized by Dri-Eaz Products, Inc. Modifications or use of unapproved parts could create a hazard and will void your warranty. Contact your authorized Dri-Eaz distributor for assistance.

BEFORE YOU BEGIN

Warranty registration

Visit warranty.drieaz.com to register your purchase. Registration allows us to better assist you with using, maintaining or servicing your equipment, as well as to contact you in case we have important safety information concerning this product. If you determine service is required, have your equipment model, serial number and original proof of purchase available and call your distributor for assistance with obtaining a return material authorization (RMA).

FIG. A: FRONT

Handle. May be used right- or left-handed.

Vacuum break lever. Squeeze to release vacuum.

Vacuum hose attachment.

View window. View extraction progress. Window panel may be removed for cleaning as needed.

Extraction glide. May be replaced when damaged or worn.

MAINTENANCE

As needed:

1. Wipe unit clean with a mild detergent. Do not use abrasive cleaners or strong cleaning agents.
2. If view window becomes dirty, remove and wash in warm, soapy water. Do not use abrasive cleaners. Flush out interior of wand head with clear water.
3. Inspect vacuum break seal. If seal is torn or worn, contact your Dri-Eaz distributor for a replacement.
4. Inspect extraction glide for wear or damage. If the head is deeply scratched or excessively worn, contact your Dri-Eaz distributor for a replacement.

EXTRACTION TIPS

1. For best results, use the tool with a professional extractor such as the portable HVE 3000 or a truckmount extractor. Consumer-type wet/dry vacuums do not provide adequate vacuum.
2. Move the tool back and forth in long overlapping strokes. Keep the extraction glide flat to the surface. It is not necessary to press down on the tool.
3. If the vacuum pressure causes the tool to "grab" the surface, briefly squeeze the vacuum break to release the tool, then resume extraction.

SERVICE

For parts and service call your local distributor or the Dri-Eaz Service Department at 800-932-3030 or 360-757-7776. Copies of the Extraction Tool manual and related information are available at www.Dri-Eaz.com. Go to warranty.Dri-Eaz.com to register your purchase.

SPECIFICATIONS

Model	Dri-Eaz Extraction Tool F511
Weight	8.2 lbs. 3.7 kg
Dimensions	Head width: 14 in. 35.6 cm Handle height: 42 in. 106.7 cm Total length: 52 in. 132.1 cm Tube thickness: 0.035 in. 0.089 cm
Construction	Stainless steel tube and vacuum break assembly; rotomolded handle and extraction head; plastic extraction guide.
<i>Specifications are subject to change without notice. Some values may be approximate.</i>	