

# Owner's Manual | Axial Air Mover Stand

*Read And Save These Instructions*


## Kit Contents



The Axial Air Mover stand hardware kit includes:

- Two (2) spacers
- Two (2) 10-32 x 3/8" screws
- Two (2) labels
- Two (2) locking levers


## Spacer Plate Installation

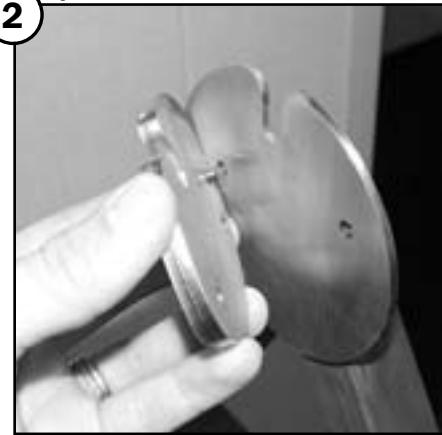

Attach one spacer plate to the inside surface of the mounting plate on both sides of the stand as shown.




## Wire Tether Removal

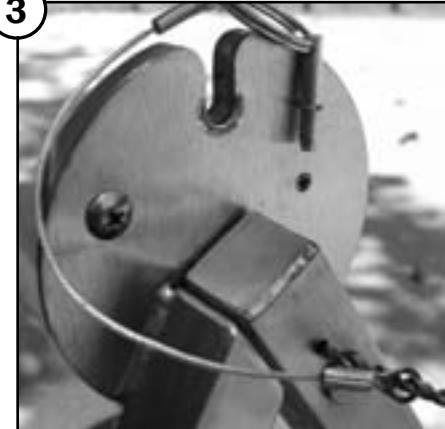


Drill out the rivets which secure the wire tethers to the fan stand. Discard wire tethers. These are not used with your Phoenix Axial Air Mover.

## Label Application

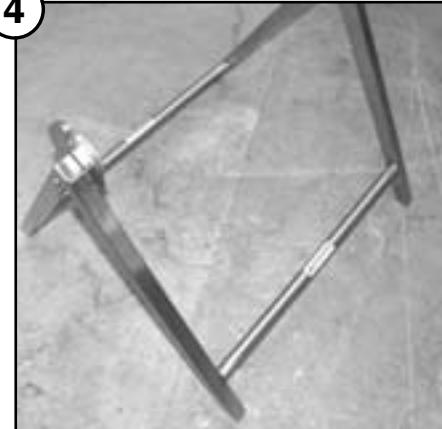

Affix one "Phoenix Restoration Equipment" label to each of the round cross members on the stand.

## Locking Lever Storage

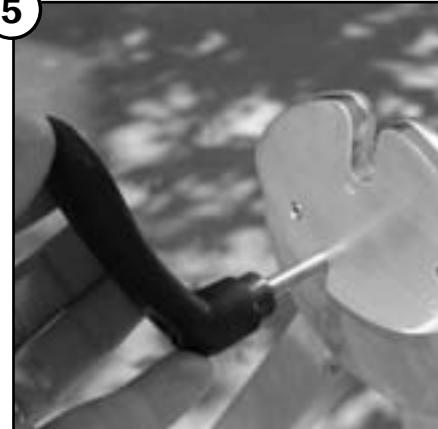

Locking levers can be stored on the fan stand by screwing them into the mounting holes in the spacer plate.

## Service Parts List

Part Number	Part Description
1024216	Screw, SS, 10-32 x 3/8"
1293423	Spring Pin, SS, 3/16 x 3/8"
4025469	Spacer Plate
4025475	Clamping Lever, 1/4-20 x 1"
4025476	Phoenix Stand Label

## WARNING

Before leaving an axial air mover stand unattended, ensure children do not have access to the equipment. Do not allow children to play with or near the stand.




2001 S. Stoughton Road  
Madison, WI 53708  
[www.usephoenix.com](http://www.usephoenix.com)


Phone 608-222-5301  
Toll-Free 1-800-533-7533  
[sales@usephoenix.com](mailto:sales@usephoenix.com)

# Owner's Manual | Stand Mounting Instructions


*Read And Save These Instructions*

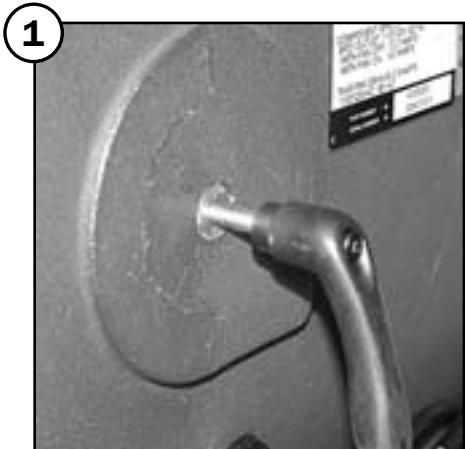

Screw both locking levers into the mounting lugs on either side of the air mover approximately 1/4".

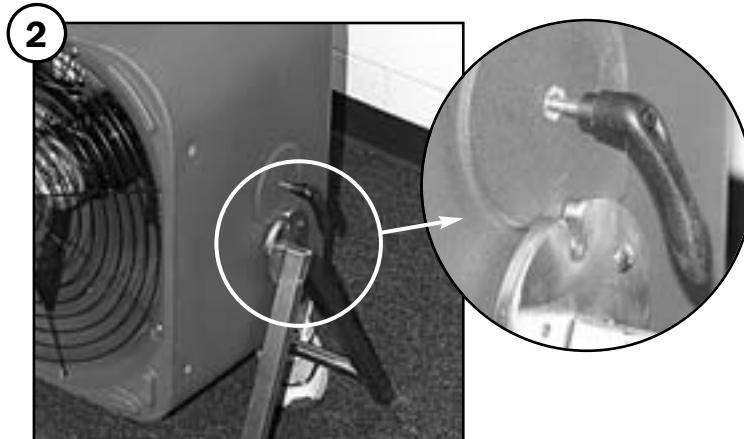

Place the air mover onto the stand by aligning the locking levers with the slots in the stand mounting plates.

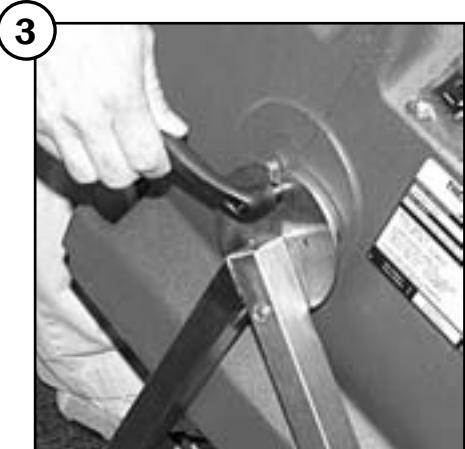

Aim the air mover for desired airflow direction and finger-tighten the locking levers.



Your Axial  
Air Mover is  
now ready  
for use.

 **PHOENIX**<sup>TM</sup>  
RESTORATION EQUIPMENT

2001 S. Stoughton Road  
Madison, WI 53708  
[www.usephoenix.com](http://www.usephoenix.com)

Phone 608-222-5301  
Toll-Free 1-800-533-7533  
[sales@usephoenix.com](mailto:sales@usephoenix.com)